



# SuperTab

## Quick start Guide

### SuperTab A10 API

#### Description of equipment

To switch the equipment on or off press the power button in for about 2 seconds. Press briefly to activate or deactivate standby mode. For the SuperTab A7 model, press for 15 seconds for "Reset".

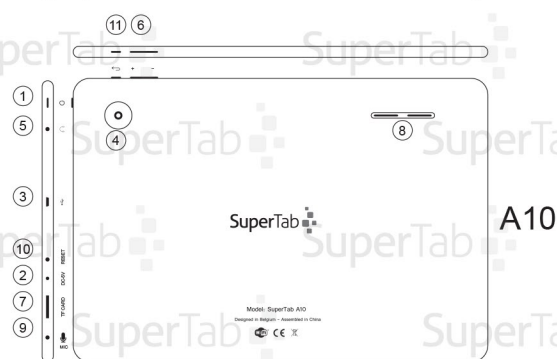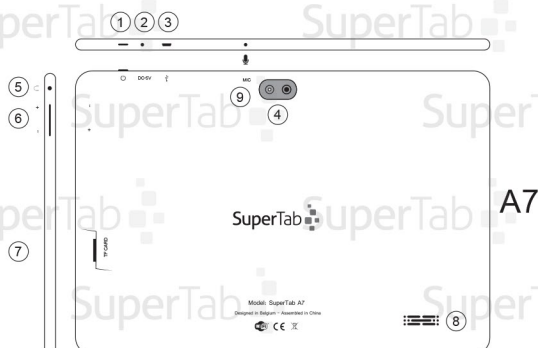

- |                          |                               |
|--------------------------|-------------------------------|
| 1 - On / Off / Reset     | 7 - Micro SD slot             |
| 2 - Mains to DC-5V cable | 8 - Sound output              |
| 3 - USB OTG socket       | 9 - Micro (A10)               |
| 4 - Front / rear camera  | 10 - Reset (A10)              |
| 5 - Headphone jack       | 11 - Return/back button (A10) |
| 6 - Volume button        |                               |

#### Main icon functions



Home button: Allows return to the main start-up screen and associated desktop.



Back button: Allows return to the previous menu or the previous page.



Menu button: Opens the contextual menu for the current application.



Applications menu: allows applications to be displayed and launched on your tablet.



Main functions of configuration system settings: also accessible via the tool bar > setting icon.



WiFi function: WiFi settings accessible directly in the tool bar > move the cursor to the right to activate.



Battery icon: allows charge level monitoring, do not use below the critical level.



Sound settings: allows volume control, choice of tones and alert, notification sounds, etc.



Storage settings: allows internal data and SD card storage control.



#### Warning and safety instructions

This leaflet contains important information about safety and the correct use of your tablet. Please read the instructions carefully.

- Charge the battery before using for the first time: Connect the charger, wait until the level reaches 100%, then start the tablet.
- Keep the tablet away from dust, high temperatures, high humidity, domestic appliances with radiation or high pressure.
- Do not touch the charger or equipment with wet hands when it is charging.
- Avoid impacts.
- Use approved accessories.
- Do not put in the mouth, or any other part of the body.
- Do not open the equipment casing, this will invalidate your guarantee.
- We decline all responsibility in the event of loss of data due to damage to the product, repairs or any other reason.
- Clean only with a dry cloth.



To protect your ear when using the audio headset do not listen on too loud for too long.



This symbol means that neither the product, nor its electronic accessories, can be disposed of with other household waste.